

Issue	Changes	Date	Author
1.0	Draft	19-Aug-03	James Monaghan

Package Checklist

The USB bi-directional printer cable product package include the following items:

- USB bi-directional printer cable
- Driver Instillation Disk
- A User's manual

Overview

The USB bi-directional printer cable allows your PC to print to most parallel printer devices connected through the USB port. Just plug the USB connector of the cable into the USB port of your PC and the other end into the Centronics connector of the parallel printer. USB (Universal Serial Bus) interface provides up to 12 Mbps data throughput, so printing is much faster compared when connected to standard parallel port (150 Kbs). The USB parallel printer cable also provides true plug-and-play and hot-plug capability. Simply plug the cable under the Windows operating system and the cable will be instantly detected.

Features

The USB bi-directional printer cable provides the following features

- Single chip (ASCI) USB to parallel communication
- Windows 98 Driver support
- Windows 2000, ME and XP have in built support.
- Universal Serial Specification Revision 1.1. Compliant
- USB full speed communication and bus powered
- USB printer class specification 1.0 compliant
- IEEE-1284 1994 (bi-directional parallel interface) specification compliant

Driver Instillation

- 1) Power on the computer and make sure that the USB port is enabled and working.

- 2) Plug the USB bi-directional printer cable into the USB port. Windows will detect the IEEE-1284 devices and run the "Add New Hardware Wizard" to assist you in setting up the new device. Click 'Next' to continue.
- 3) Insert the USB bi-directional printer driver disk into the floppy drive. Click 'Next' to continue. For Windows 98 click 'Search' for the best driver for your device and click to search driver from the floppy.
- 4) Windows will detect the driver and shows the USB to parallel converter device. Click 'Next' to continue installation
- 5) Click 'Next' to continue and let windows copy the necessary files to your hard drive.
- 6) When windows finished installing the software required for the new USB to parallel convertor device click 'Finish'.

Setting Up the Printer Device

Follow the steps below on how to connect your printer to the USB port of the PC:

- 1) Turn off your printer. Plug the Centronics connector of the USB bi-directional printer cable into your printer. Turn on the printer.
- 2) Turn on your PC and plug the USB connector of the USB parallel cable into the USB port.
- 3) If you have already installed the printer device before, then click
Start -> Settings -> Printers
Right click the default-installed printer and click on 'Properties'. The properties dialog box of the installed printer will appear on your monitor.
- 4) Click the 'Details' folder tab and change the port to LPT2:(USB to Parallel Port)..

End of Instillation